Oral-B

AdvancePower Kids

D 9513 K

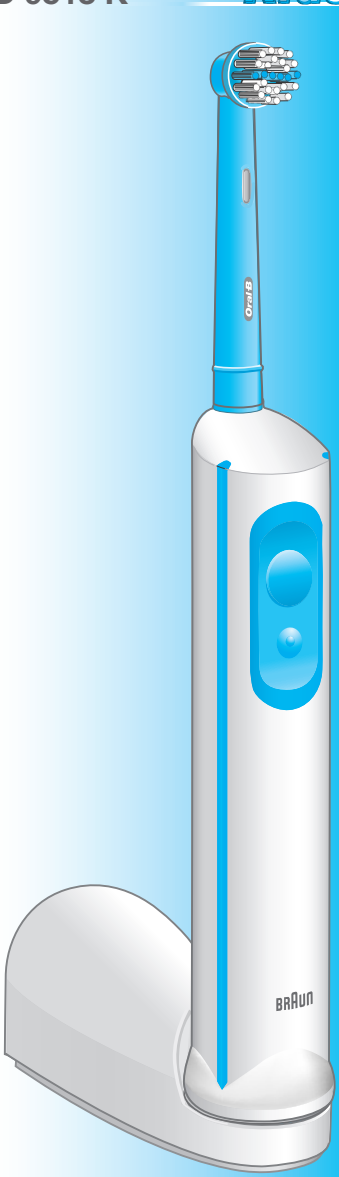

powered by BRAUN

Type 4728

문의사항이 있으시면 소비자상담실로 연락주시기 바랍니다.

KR 소비자 상담실
080-920-6000(수신자 부담)

If you should require further assistance, please call our Consumer Service line.

GB **0 800 73 11 792**

IRL **1 800 509 448**

Internet:
www.oralb.com
www.braun.com

Braun GmbH
Frankfurter Straße 145
61476 Kronberg/Germany

3-711-332/00/XI-06
Korea/GB
Printed in Germany

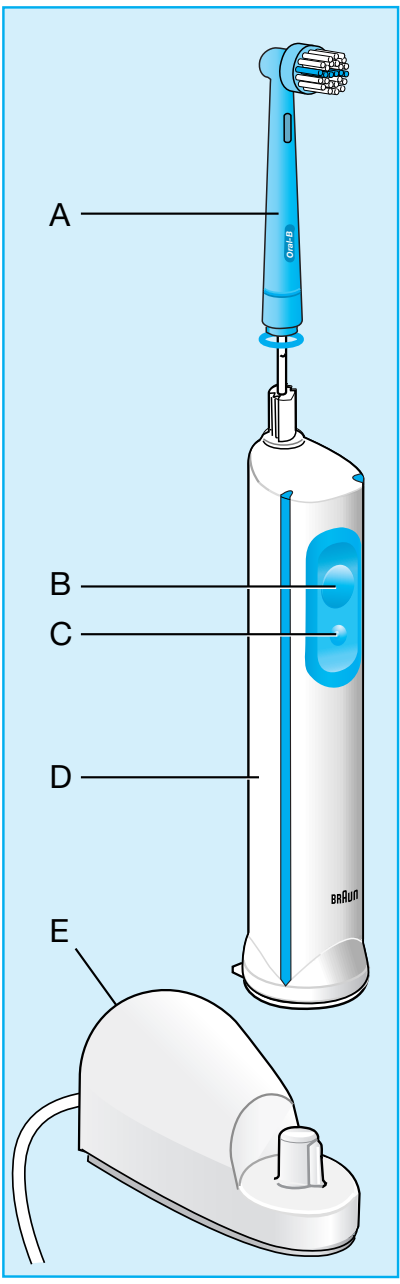
A
B
C
D
E
BRAUN

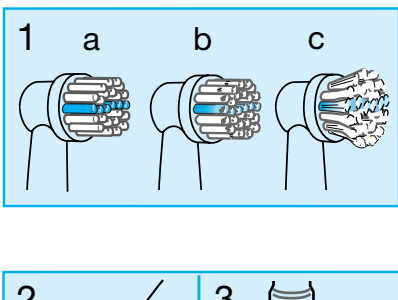
1
a
b
c

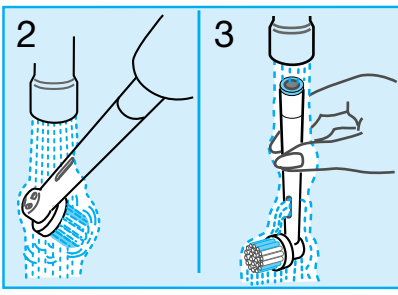
2
3

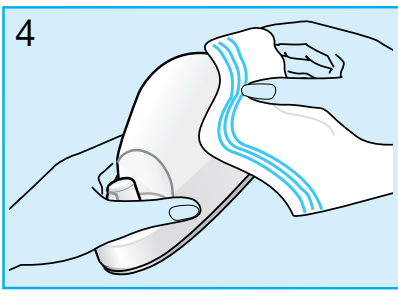
4

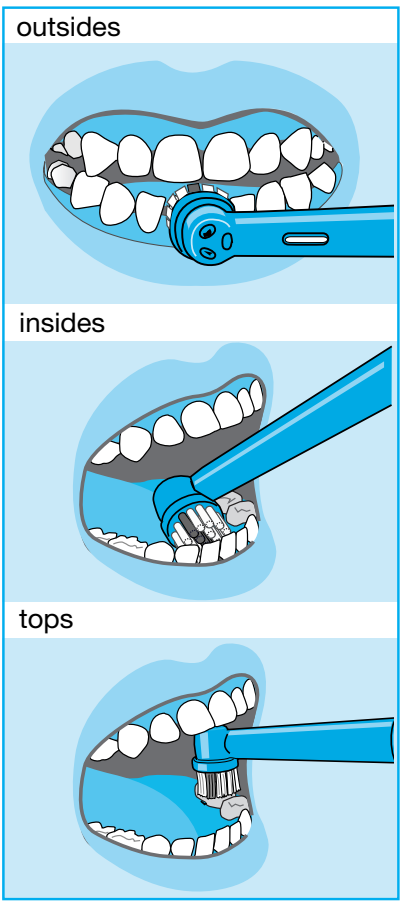
outsides
insides
tops

한국어

오랄-비 어드벤스파워 키즈를 구입해 주셔서 감사드립니다. 오랄-비 어드벤스파워 키즈는 어린이의 구강 내 플라그를 효과적으로 제거하기 위해 권위있는 치과 전문의들과 공동으로 개발한 제품입니다. 새로워진 어린이 전동칫솔은 아이들이 즐겁게 양치할 수 있을 뿐만 아니라, 올바른 양치질 습관을 가질 수 있도록 도와줄 것입니다.

본 제품은 3세 이상의 어린이에게 적합합니다. 사용하시기 전, 반드시 사용설명서를 충분히 읽고 숙지하신 후, 아이들에게 사용법을 알려주십시오. 처음 사용하는 어린이들은 사용법이 익숙해질 때까지 부모님의 지도하에 양치질하도록 하십시오.

중요 사항

- 정기적으로 전기코드의 손상여부를 점검하십시오 손상되었거나, 작동되지 않을 경우, 충전기(E)와 함께 대우일렉 서비스 센터로 가져가십시오.
- 제품을 떨어뜨렸을 경우, 손상 부위가 육안으로 보이지 않을지라도 칫솔모를 교체하신 후 사용하십시오.

제품명세

A. 칫솔모
B. On 스위치
C. Off 스위치
D. 어드벤스파워 키즈 전동칫솔 핸들
E. 충전기

제품사양

전력 공급: 충전기 밑면 참조
전동칫솔 핸들 전압 : 1.2 V

전원연결 및 충전

본 제품은 전기적으로 안전하며 욕실에서도 사용하실 수 있습니다.

- 충전기(E)를 전원에 연결하신 후, 전동칫솔 핸들(D)을 충전기에 꽂으십시오. 이 때, 핸들의 스위치는 반드시 꺼진 상태여야 합니다. 충전하시기 전 Off 스위치(C)를 한번 더 누르십시오.
- 완전 충전에는 16시간이 소요되며, 완전 충전후 약 20분 동안 사용하실 수 있습니다. 하루 2번, 2분 동안 양치질 하실 경우 5일간 사용가능합니다.
- 매일 사용하시는 경우, 전동칫솔 핸들을 전원이 연결된 충전기에 놓아두시면 언제나 완전 충전된 상태에서 사용하실 수 있습니다. 과충전의 우려는 없습니다.

충전지 관리

충전지의 용량을 최대화하기 위해서는 최소한 6개월에 한번씩 정기적으로, 충전기를 전원에 연결하지 마시고 평상시대로 사용하여 충전지에 충전된 용량을 완전히 사용하십시오.

사용 방법

전동칫솔을 사용하기 전에 본 제품에 대한 사용단계를 다음과 같이 정확하게 설명해주십시오.

- 칫솔모에 치약을 묻힙니다. (어린이에게는 불소함유치약을 권장합니다.)
- 치약이 튀는 것을 방지하기 위하여 전동칫솔의 칫솔모를 치아에 닿게 한후, On 스위치(B)를 누르십시오.
- 아래 치아부터 양치질을 시작하셔서 칫솔모를 천천히 다음 치아로 옮기십시오.
  - 치아의 바깥 부분
  - 치아의 안쪽 부분
  - 치아의 씹는 부분
- 이 때, 문지르거나 무리하게 힘을 주지 마십시오. 오랄-비 어드벤스파워 키즈는 적정한 세정운동으로 플라그를 자동으로 제거해줍니다.
- 양치질 후 1분이 지나면, 짧은 간격의 진동이 울립니다. 이 때 어린이는 치아의 윗부분으로 칫솔모를 옮긴 후, 다음 진동이 울릴 때까지 윗부분의 치아를 하나씩 양치질 하십시오.
- 양치질이 끝나면 칫솔모를 입에서 꺼내기 전에, Off 스위치(C)를 눌러 전원을 끄십시오.

3개월마다 칫솔모를 교체할 것을 권장합니다.
칫솔모 교체시기를 알려주는 기능의 푸른색 인디케이터 칫솔모(1a)가 있습니다. 하루 2번, 2분씩 치약을 사용해 올바르게 양치질할 경우, 3개월 이내에 푸른색 부분이 반 정도 사라집니다 (1b). 만약 푸른색이 없어지기 전에 칫솔모의 모양이 (1c)와 같이 흐트러진다면, 양치질 할때 치아와 잇몸에 과중한 압력을 주기 때문입니다. 이 때는 양치질할때 가하는 힘을 줄여 주십시오.

본 제품에는 전동칫솔 교체용 어린이 칫솔모 (키즈 파워 칫솔모 EB10)을 사용하십시오

가까운 소매점이나 오랄-비 전동칫솔 판매처, 서비스 센터에서 구입하실 수 있습니다.

청소 방법

사용 후, On 스위치(B)를 켠 상태로 흐르는 물에 몇 초간 칫솔모를 깨끗하게 닦으십시오 (2). Off 스위치(C)를 누른 다음, 칫솔모를 핸들과 분리하십시오. 분리된 칫솔모와 핸들을 따로 흐르는 물에 헹구십시오(3). 마른 헝겊으로 물기를 제거한 후 충전기에 핸들을 꽂아 보관하십시오.

본 사용설명서는 사전예고 없이 변경될 수 있습니다.

본 제품은EMC 지침89/336/EEC와 저전압규정 (73/23/EEC)에 의거하여 생산된 제품입니다.

이 제품에는 충전지가 포함되어 있습니다. 이 제품을 폐기 처리할 경우 환경 보존을 위해 생활 쓰레기로 분류하지 마십시오. 다 쓴 충전지는 가까운 서비스 센터로 가져가시거나 환경보호법에 의거하여 승인된 재활용 또는 폐기장소로 버리십시오.

품질보증

본 제품은 구입일로부터 1년간 품질을 보증합니다.
1년간의 품질 보증기간 동안 제품 자체나 생산과정에서
비롯된 불량품은 상태에 따라 무료보수 또는 교환해 드립니다.

보증기간 내에라도 소비자의 귀책사유에 의한 파손
(전압을 잘못 사용한 경우, 부적절한 전원 플러그에
연결한 경우, 사용 중 파손 등), 정상적인 마모, 사용에
지장이 없는 경미한 결함 등은 무상수리 또는 교환이
적용되지 않습니다.

공식 서비스 센터가 아닌 곳에서 수리를 하였거나 정품이
아닌 부품을 사용했을 경우에는 품질보증 대상에서
제외됩니다. 그리고 본 제품의 구입일자가 판매점에 의해
혹은 구입시의 영수증에 의해 확인되어야만 정상적으로
품질 보증품으로 인정됩니다. (구입시 영수증을 잘 보관
하시어 애프터 서비스시 불이익이 없도록 하십시오.)

애프터 서비스를 받으셨더라도 원래의 품질보증기간이
연장되는 것은 아닙니다.

오랄-비 전동칫솔은 재정경제부 고시 소비자 피해 보상
규정에 의거하여 보상 또는 교환 받으실 수 있습니다.

애프터 서비스

대우일렉 서비스 센터 : 1588-1588
가까운 대우일렉 서비스 센터에서 A/S를
받으실 수 있습니다.

오랄-비 제품 : 전국 유명 백화점 및 전자상가에서
구입할 수 있습니다.
www.oralb.com 또는 www.oral-b.co.kr

품질보증서

본 제품은 철저한 품질관리와 검사를 거쳐서 제조·수입된 제품입니다.
아래 기재된 내용으로 품질을 보증합니다.

제 품 명			모 델 명		
구 입 일			보증기간		구입일로부터 1년
고객			판매점		

한국 피앤지 판매 (유)
서울시 강남구 도곡동 448-2
전화 080-600-0000(수신자부담)

English

Dear parents,
the Oral-B AdvancePower Kids has been developed with leading dental professionals to effectively remove plaque from children's teeth. We hope your child will enjoy his/her new Oral-B appliance.

This appliance is suitable for children 3 years or older. Please read the use instructions carefully and completely before showing your child how to use the appliance. We recommend that parents supervise their children when they start using the appliance in order to help them become familiar with it.

Important
- Periodically check the cord for damage. A damaged or non-functioning unit shall no longer be used. Take the charging unit (E) to an Oral-B Braun Service Centre.
- If the product is dropped, the brushhead should be replaced before the next use even if no damage is visible.

Description
A Brushhead
B On switch
C Off switch
D Handle
E Charging unit

Specifications
Power supply: see bottom of charging unit
Handle voltage: 1.2 V

Connecting and charging
The appliance is electrically safe and can be used in the bathroom without hesitation.

- Plug the charging unit into an electrical outlet. Place the handle on the charging unit. Handle must be switched off.
- A full charge takes 16 hours and will provide an operation time of approx. 20 minutes.
- For everyday use, the handle can be stored on the plugged-in charging unit to maintain the toothbrush at full power. Overcharging is impossible.

Battery maintenance
To maintain the maximum capacity of the rechargeable battery, unplug the charging unit and discharge the handle by regular use at least every 6 months.

Using the toothbrush
Use the following steps to show and explain to your child how to use the appliance properly:

- Put a small amount of toothpaste onto the brushhead. (We recommend fluoride toothpaste.)
- First guide the brushhead to the teeth, only then turn on the handle with switch (B).
- Start with the lower teeth: Slowly guide the brushhead from tooth to tooth;
  – first the outsides,
  – then the insides,
  – finally the chewing surfaces.
  Do not scrub or press too hard. The Oral-B AdvancePower Kids automatically provides the proper cleaning action.
- After one minute of operation, an incorporated timer signals by a short stutter. This tells your child to move on to the upper teeth and clean them – again tooth by tooth – until the next timer signal is given.
- Turn off the handle with switch (C) while the brushhead is still in the mouth.

We recommend that you replace the brushhead every three months. The brushhead is provided with a row of blue INDICATOR® bristles (1a). With proper brushing twice a day for two minutes, the colour will disappear half-way down these bristles in a 3-month period (1b), provided toothpaste is used. If bristles begin to splay before the colour starts to recede, this indicates that your child exerts too much pressure on teeth and gums (1c).

Replacement brushheads EB10
Available at your retailer or at an Oral-B Braun Service Centre.

Cleaning
After use, rinse the brushhead for several seconds under running water with the handle switched on (2). Then switch off the handle and take off the brushhead. Rinse both parts separately under running water (3) and wipe them dry before putting the handle back onto the charging unit.

Subject to change without notice.

This product conforms to the European Directives EMC 89/336/EEC and Low Voltage 73/23/EEC.

This product contains rechargeable batteries. In the interest of protecting the environment, please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at an Oral-B Braun Service Centre or at appropriate collection points provided in your country.

Guarantee
We grant 1 year guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor. This guarantee does not cover: damage due to improper use, normal wear or use, especially regarding the brushheads, as well as defects that have a negligible effect on the value or operation of the appliance.

The guarantee becomes void if repairs are undertaken by unauthorized persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Oral-B Braun Service Centre.